

Porta-Jib Explorer by Losmandy

Quick and easily done by one person, the original configuration has monopods on each end. A second option for supporting the system in trolley mode is to move the tripod to one end of the rails and angle the two monopods on the other end to increase stability.

To change the Explorer from the original configuration to this second configuration, you will need this new cross piece.



Then do the following:

- 1) Remove the monopods from the ends of the rails.
- 2) Remove remaining two screws that hold the fulcrum assembly to the small uprights on the pan assembly and lift the entire rail assembly completely off the tripod.

Supplemental Instructions

Original configuration.
Tripod in center, with a monopod on each end.



- 3) This leaves the base looking like this




- 4) Add cross piece between the two uprights



- 5) Add weight bucket clamp to the cross piece



- 6) Drop one end of the rail assembly into the clamp you have just added on step 5. Notice you can angle the clamp to let one end of the rail assembly rest on the ground as you attach the other end to the new clamp.

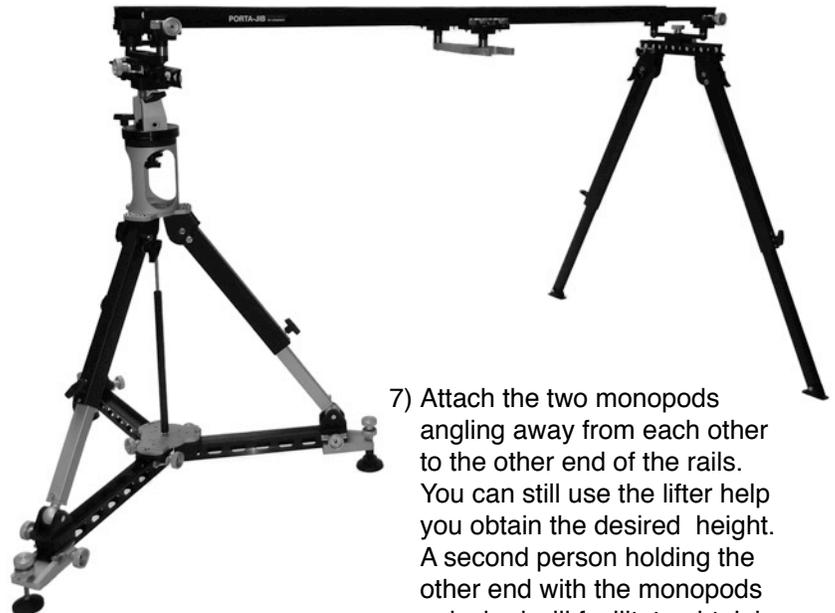

- 7) Attach the two monopods angling away from each other to the other end of the rails. You can still use the lifter help you obtain the desired height. A second person holding the other end with the monopods unlocked will facilitate obtaining the proper level.